




Recessed Shampoo Caddy

Install Instructions

V 4.0 | 2026

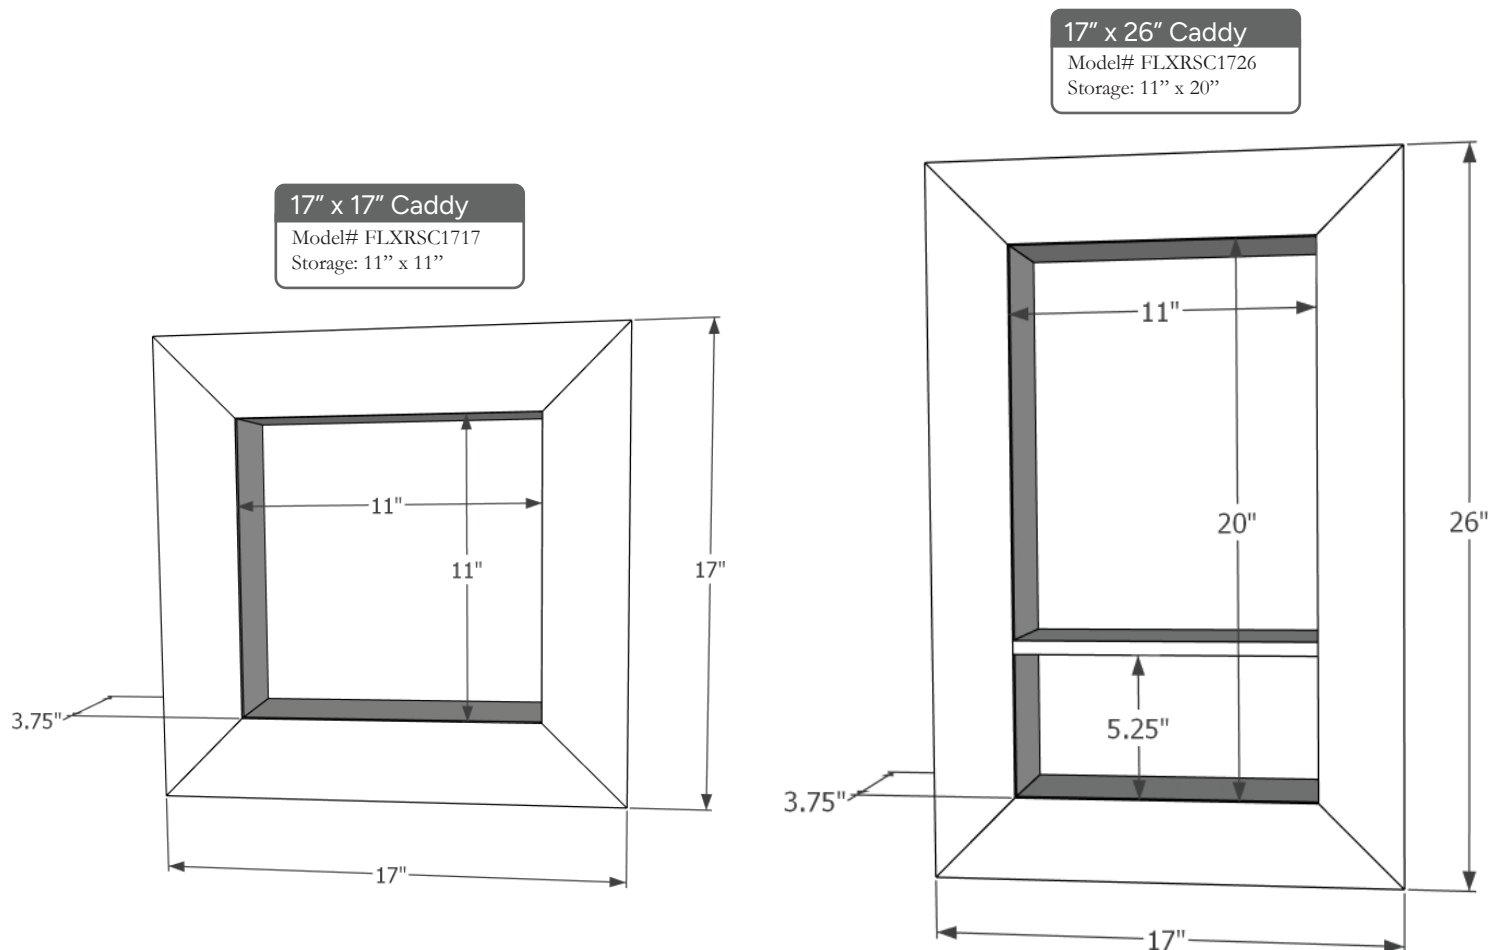

BEFORE YOU START

Recessed Shampoo Caddies are installed between studs in any wall of your surround. Install the FlexStone bath surround as normal, but mark the locations of studs as you go.

TOOLS NEEDED:

- Stud Finder
- Tape Measure
- Level
- Construction adhesive
- Painters Tape
- 100% Silicone

1

LOCATE THE OPENING

Choose a location between two wall studs. Mark the stud positions and confirm the caddy will fit.

2

CUTTING THE OPENING




17" x 17" Caddy: Cut Opening to: 12.25" x 12.25"

17" x 26" Caddy: Cut Opening to: 12.25" x 21.25"

Important: The opening must be slightly larger than the recessed body, but smaller than the front flange. A horizontal support stud is optional but recommended for additional strength.

3


DRY FIT

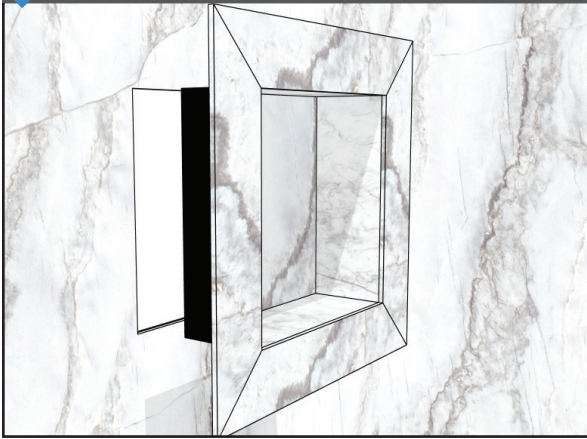

Dry fit the caddy before applying adhesive.

4


REMOVE MASKING & APPLY ADHESIVE

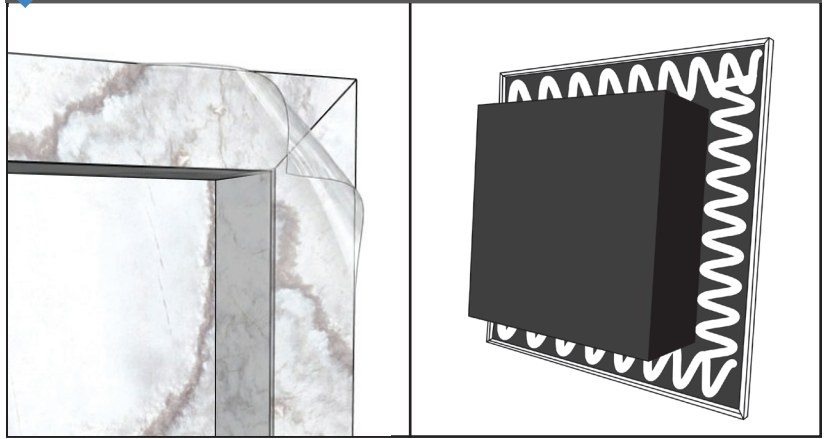

Remove the protective masking. Apply construction adhesive around the entire backside of the flange, filling the recessed flange cavity.

5


INSERT AND SECURE

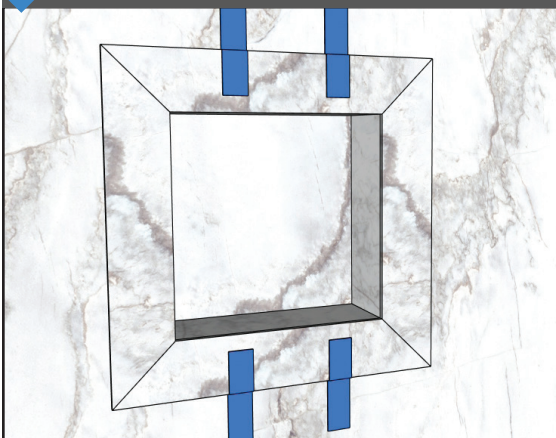

Press the caddy into the opening until the flange sits flat against the wall panel. Secure it with painter's tape until the adhesive cures. The cured adhesive provides additional support and a secondary water barrier.

6

APPLY SILICONE

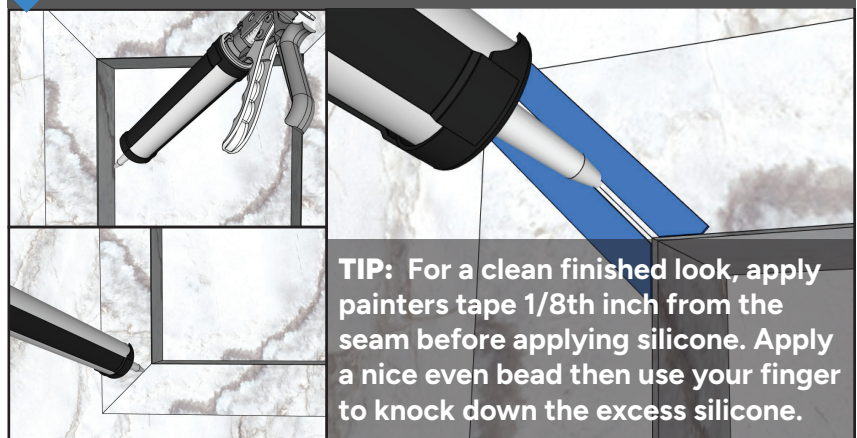

TIP: For a clean finished look, apply painters tape 1/8th inch from the seam before applying silicone. Apply a nice even bead then use your finger to knock down the excess silicone.

Critical Leak-Prevention Step: The silicone on the front seams forms the primary water barrier. Do not leave any seams unsealed. Seal all interior edges. Seal all perimeter edges and diagonal front seams.

FAILURE TO APPLY SILICONE PROPERLY WILL VOID YOUR WARRANTY.