




**FLEXSTONE**  
LUXURIOUS BATH SURROUNDS

# Window Sill Frame Trim Install Instructions

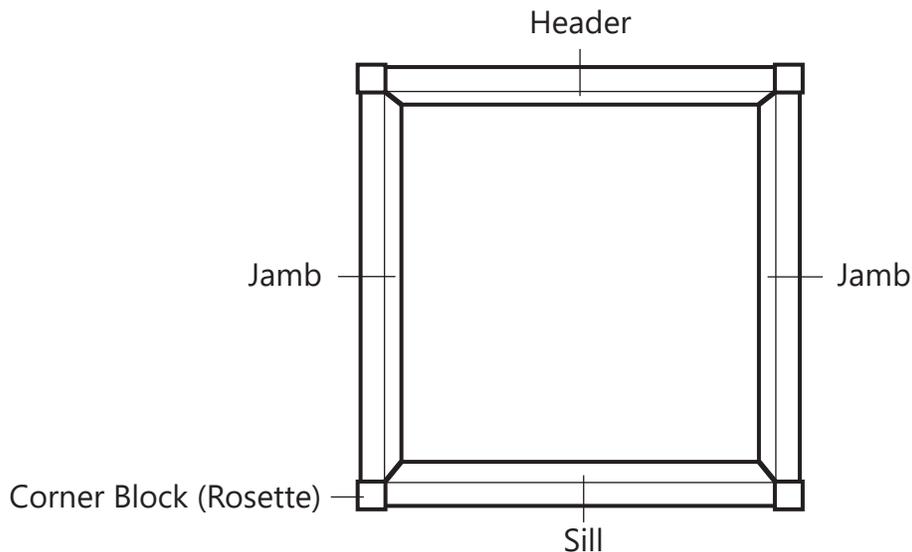

\*Read all instructions before starting\*

For missing items or returns do not return to store.

Please call 877-941-3662

(Monday – Friday 8:00 a.m. – 5:00 p.m MT)

For additional information and resources, visit:  
[www.FlexstoneProducts.com](http://www.FlexstoneProducts.com)

V.2 - 2/28/2019

# Window Trim Instructions

*NOTE: The Window Sill Frame Trim can easily be cut down to size to precisely frame the window in your bath surround. Before installing the window sill frame, make sure to waterproof the window sill with a waterproof membrane, such as RedGard.*

## 1. Measure Depth

For each piece of trim, measure from the window sash to the outside of the wall panel in 3 locations —left, center & right.



## 2. Measure Length

Measure both the inside and outside length of the sill, jambs and header. For each piece, use the shortest measurement of the two and subtract 1/2" to allow room for the corner blocks.



## 3. Cut Trim Pieces

Cut the trim pieces according to the depth and length measurements. Remember to cut off an additional 1/2" from the length measurements to allow room for the corner blocks.



## 3. Dry-Fit

Dry-fit each piece and check for plumb and level.




## 4. Install Trim Pieces

Apply silicone to the joints where sills and jambs meet the window. Next, apply a bead of silicone on the wall panel 1/2" from the edge all around the window. Apply adhesive to sill, jambs and header. If any piece is out of square, add more adhesive to compensate and install each piece.



## 5. Install Corner Blocks

Install each corner block by applying adhesive into the hollow back and placing the corner block in each corner of the window sill frame. To avoid a messy cleanup, be careful to not overfill.

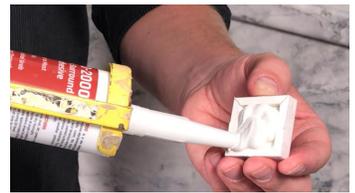

## 6. Finish with Silicone

To finish up the installation, use color matching silicone and seal both the entire outside perimeter as well as all inside seams of your window trim kit.



## Contents:

Trim Pieces

Corner Blocks (Rosettes)

Adhesive with Tip

Packaged Date:  Packaged By: